

ENGLISH

## INSTRUCTION MANUAL



# ONE

## GENERAL RULES

### HOW TO USE THE MACHINE

*Please read carefully the instruction manual and warranty limitations.*

*The machine must be connected to a regular power outlet provided grounding.*

*The machine must be kept clean by frequently washing the grill, drip tray, filter holder with its filters, the tank, the steam wand (on models with the steam system) and outlet holes.*

*IMPORTANT: Never immerse the machine in water or put in the dishwasher. The water in the tank must be replaced regularly.*

*Do not use the machine with an empty tank.*

*Check that the charging pipe of the tank is fully seated in the groove.*

*We recommend:*

- 1. to get the best performance, leave the filter holder without the pod and with the filter empty and clean.*
- 2. at least every 2 months decalcify using special products in according with the instructions in chapter **DECALCIFICATION***
- 3. regularly carry out the operations described in chapter **CLEANING AND MAINTENANCE***

## Important safety precautions

Using electrical appliances should always be down as follows security measures

### USING YOUR MACHINE

- This appliance must be used only for domestic use. Any other use is considered improper and therefore dangerous.
- Disconnect the power cord from the power when not in use.
- Pay attention to the hot surfaces.
- This machine is designed to "make espresso coffee": Be careful to not burn yourself with water or steam or improper use of the.
- The device should not be used by children.
- The appliance must be used only by adults with mental and physical capacities.
- Use the device only in a closed areas and protected from weather elements.
- To protect against fire, electric shock or injury do not immerse the power cord, plug and the appliance in water or other liquid.
- Do not use the appliance for purposes other than those provided.
- Do not place the appliance on a gas or electric stove or inside of a hot oven.
- Before unplugging make sure the power button is turned off, or that the power light is off.
- Using accessories not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Do not let cord hang over edge of table or counter.

## INSTALLING THE APPLIANCE

- Read these instructions carefully.
- Never install the machine in an environment that can reach a temperature of less than or equal to 0 ° C (if the water freezes, the device may be damaged) or above 40 ° C.

- Check that the mains voltage is the same as indicated on the label of the machine.

Only connect the machine to an outlet with a minimum of 6 Amp when powered at 230 Vac and 12 Amp at 120 Vac when powered and equipped with efficient earthing.- In case of incompatibility between the plug and the appliance, replace the socket with another suitable type by a qualified person. - Place the appliance on a work surface far away from water taps and sinks - After removing the packaging, check that the appliance before installation.

## CLEANING

- Disconnect the power cord when you clean.
- Before unplugging make sure the power button is turned off, or not illuminated.
- Do not expose the device to heavy jets of water or diving partial or total.
- Let the appliance cool before cleaning.
- Clean the body and accessories with a damp cloth and then dry by a non-abrasive product. Detergents are not recommended .

## MALFUNCTION OF THE MACHINE

- Do not use an appliance if the power cord or plug is damaged or if the unit shows signs of malfunctioning or if it has been some damage. Return the appliance to the nearest authorized dealer for checks or repairs. If the power cord is damaged it must be replaced by the manufacturer or an authorized service center.
- In case of failure or malfunctioning, turn it off and do not tamper with it. For any repairs, contact a Service Centre authorized by the manufacturer and request the use of original spare parts. The non-respect of the content may compromise the safety of the device and void the warranty.

## IMPROPER USE OF THE MACHINE

- This device must be used only for domestic use. Any other use is considered improper and therefore dangerous.
- The manufacturer can not be held responsible for any accidents caused by lack of or non-compliance with the laws of the plant grounding.
- The manufacturer can not be held responsible for any damage caused by improper, incorrect or unreasonable.

# Installation and Switching the appliance

Before connecting the machine to the power supply, carefully read the safety instructions in the previous chapter. Make sure that the machine is disconnected from the main power.

Remove the tank, wash it, fill with cold water and place it back into its slot making sure it is fully inserted. Connect the machine electrically.

We recommend keeping the original packaging (at least for the warranty period) to send the machine to the service center for repair


### WARNING:

When the machine is in operation, the contact with the coffee group, the steam and the metal part of the filter holder can cause burns.

## Turn on and off

Restore the water level in the tank with cold water (Fig. 1)

To turn on the machine, press the button (Fig. 2). The green light indicates that the machine is powered.

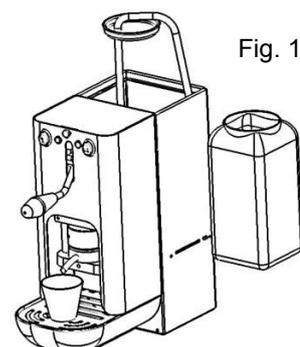

Turning off the red light next to the button indicates that the coffee brewing machine has reached its optimum operating temperature (Fig. 3).

NOTE: In case of first use or after a prolonged period of inactivity, it is suggested to dispense through the filter holder empty a few cups of water.

**PROBLEMS AND SOLUTIONS**

To turn off the machine, press the button and make sure the green light on the front panel is off, you should not unplug the cord from the power outlet when the machine is on.

## COFFEE PREPARATION

The machine has been designed to be used with ESE pods. Make sure the light next to the button maker is turned off.

Raise the lever as shown in figure (4), remove the filter if any pod exhausted or residues.

Place a pod E.S.E. as shown in figure (5), taking care that the flaps remain on the outer edge of the filter, blocking the pod doing pressure firmly on the lever until you feel that it is locked.

Press the coffee button to start the coffee brewing, to stop the flow, press the button again. Remove the pod from the filter holder and repeat the above steps to prepare other coffees.

After the last dispensing we recommend to scroll through the water with the system engaged and after removing the pod from the filter

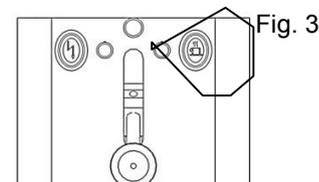


Fig. 3

## Decalcification

For a proper maintenance, the machine must be discaled periodically, this serves to remove lime scale inside the system.. To decalcify, we recommend using **Initiation of procedure:**

Fill the tank with 1 liter of water, put the desalting agent wait for it melt. Make sure that the filter in the filter holder is free of pods, enter under the group of dispensing an empty container capacity of at least 1 liter Press the coffee button and wait

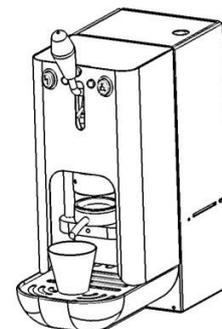


Fig. 4

## Cleaning and Maintenance

For the correct operation and a high standard of quality of the drink is recommended that you regularly and carefully clean the machine.

Operations to be performed with the machine cold and disconnected:

Clean the water tank.

Clean the filter holder and the filter with hot water and detergent (at the end check that the holes in the filter are free).

Clean the cup grille.

Clean the drip tray under the grill.

Cleaning the brew group of any residual powder coffee.

**WARNING:**

- Do not clean the machine with aggressive cleaning agents (methanol, methyl chloride, acetone, aromatic hydrocarbons) may damage the surfaces
- The cleaning and maintenance of the machine must always be carried out with the plug disconnected from the mains wall socket.

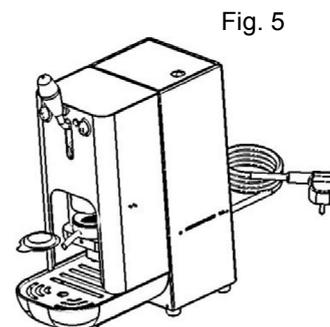


Fig. 5

## Technical features

Frame material: Stainless steel

Internal boiler material: brass

Tank: 1.4 liters

Pump: 15 bar

Drain solenoid

Net Weight: 7 kg

Voltage: 230 V, 50 Hz (EU), 120 V, 60 Hz (USA)

Power: 850 W (EU) 1100 W (USA)

The manufacturer reserves the right to make changes or improvements without notice

## Advices

To enjoy a high quality espresso, remember to:

- Change the water in the tank and keep clean the filter holder, filters and the brewing unit.
- Use water with a low calcium content to reduce deposits inside the machine. - Use pre-warmed cups.

PROBLEM	SOLUTION	PERMANENCE OF THE PROBLEM
Turn on the machine, but the green light does not light up	- Check the electrical connection to the mains; check the status of the protective switch of the home network	
The machine will not brew coffee	<ul style="list-style-type: none"> <li>- Fill the tank, and ensure that it is fully seated</li> <li>- Remove the filter holder from the group</li> <li>- Wait until the light next to the coffee button is off (machine ready to dispense)</li> <li>- Place a container under the brew group and press the coffee button.</li> <li>- Dispense water for a few seconds</li> <li>- Stop dispensing</li> <li>- Insert a pod into the filter holder and secure it firmly until it stops and proceed with the coffee brewing</li> </ul>	<i>Contact your service</i>
Water loss from the group during dispensing	<p>Case a) The pod is not pressed properly. Adjust the pods gate than turning it clockwise, we recommend make a few adjustments to avoid an excessive pressure on the lever to hold the pod.</p> <p>Case b) the seal of the pod gate is worn, replace it only with an original one.</p>	
Leakage of water from the inside of the machine	- Turn off the machine, disconnect the electric plug	

## Warranty limitations

The warranty does not cover damage caused by:

- Failures caused by lime or a non-periodic decalcification
- Any failure caused by operation with voltages other than those indicated on the label
- Damage caused by improper use or contrary to the instructions
- Damage caused by changes internally are also not covered by warranty, labor and parts cost on machines previously manipulated by unauthorized service centers that will be totally chargeable to the customer Finally:
- Do not put the drip tray in the dishwasher
- Failure to observe these instructions may cause damage to the body not covered by warranty Warning:
- We recommend that you keep the original packaging (at least for the warranty period) to ship the machine to the service center for repair
- Any damage caused by transport without adequate packaging will not be covered by warranty



M & V S.r.l.- Via L. Guerra, 9  
• 80040 Cercola (NA) Italy